Abteilung: Informationstechnologie Schwerpunkt: Netzwerktechnik



Configure Basic Router Settings

Laboratory protocol Configure Basic Router Settings



Subject: NWT|ANGE

Class: 3AHITN

Name: Stefan Fürst, Marcel Raichle

Group Name/Number: Dumm und Dümmer/7

Supervisor: ANGE Exercise dates: Submission date: Abteilung: Informationstechnologie Schwerpunkt: Netzwerktechnik



Contents

1	Task definition	3
2	Summary	3
3	Exercise Execution	4
	3.1 Set Up the Topology and Initialize Devices	4
	3.2 Configure Devices and Verify Connectivity	4
	3.2.1 Configure the PC interfaces	
	3.3 Configure the router	5
4	List of figures	6

htl donaustadt Donaustadtstraße 45 1220 Wien

Abteilung: Informationstechnologie Schwerpunkt: Netzwerktechnik



1 Task definition

2 Summary

Abteilung: Informationstechnologie Schwerpunkt: Netzwerktechnik



3 Exercise Execution

3.1 Set Up the Topology and Initialize Devices

This exercise was done in Cisco Packet Tracer and the devices were placed and wired using the automatic cabling type, as all the devices are Auto-MDIX compliant anyway.



Figure 1: Network topology required for this exercise

After that, everything was turned on and the router and switch were both iniliazised and reloaded.

3.2 Configure Devices and Verify Connectivity

3.2.1 Configure the PC interfaces

The IP addresses for both PCs have been set in the IP Configuration application.

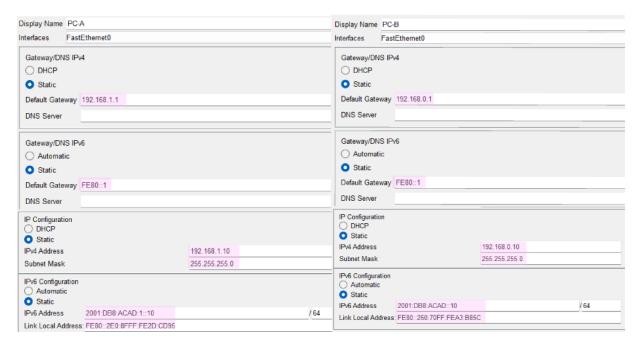


Figure 2: IP configuration for PC-A and PC-B

Abteilung: Informationstechnologie Schwerpunkt: Netzwerktechnik



3.3 Configure the router

To access the router's configuration mode, connect to the router through the console port and execute the en and conf t commands.

The following basic settings are configured using the commands listed below:

```
#setting the hostname
hostname R1
#setting the domain name of the router
ip domain name ccna-lab.com
#disable DNS lookup on mistyped commands
no ip domain lookup
#encrypt plain text passwords
service password-encryption
#setting the minimum password length to 12 characters
security passwords min-length 12
```

To set up SSH for configuring the router over the network, first, a user must be created with the *username SSHadmin secret 55Hadm!n2020* command, which creates a user named SSHadmin and sets an encrypted password.

Once the user has been created, an RSA key pair needs to be generated using the *crypto key generate rsa* general-keys modulus 1024^{1} command.

```
R1(config) #crypto key generate rsa general-keys modulus 1024
The name for the keys will be: R1.ccna-lab.com

% The key modulus size is 1024 bits
% Generating 1024 bit RSA keys, keys will be non-exportable...[OK]
*Mar 1 0:13:30.311: %SSH-5-ENABLED: SSH 1.99 has been enabled
```

Figure 3: Key pair generation

¹As this is done in Packet Tracer and the hardware in the lab is outdated, the keys are limited to 1024 bit length instead of the 4096 bit length that should be used in a production environment.

Abteilung: Informationstechnologie Schwerpunkt: Netzwerktechnik



4 List of figures

List of Figures

1	Network topology required for this exercise	4
2	IP configuration for PC-A and PC-B	4
3	Key pair generation	Ę